


SAFETY LIGHT CURTAIN

Alignment in 5 Steps

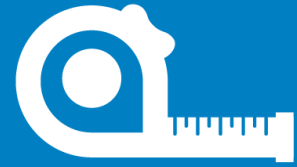


MOUNT

Using a tape measure, mount the sender and receiver at the same height from the reference plane.



LEVEL

Using a level, adjust mounting hardware to ensure both light curtains are straight.

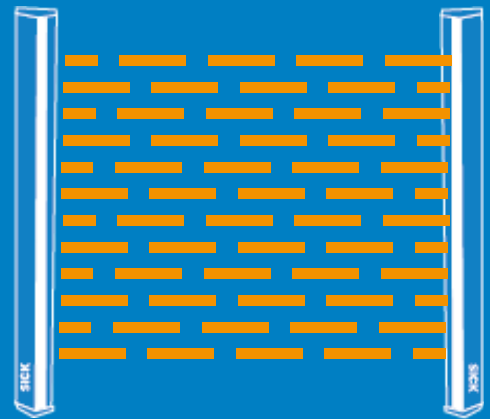

ALIGNMENT AID

If using a deTec with the integrated laser alignment aid, turn the laser on and rotate the sender until the laser hits the bottom row of blue alignment LEDs of the receiver.



ROTATE

Rotate the receiver until the top and bottom rows of Blue LEDs each have four LEDs illuminated. The field LEDs will turn green.



ON & OFF

Turn off the alignment lasers and run your machine!



SICK

Sensor Intelligence.